

# Routine Maintenance - Service Indicator Intervals

| Maintenance Item   | Oil Service | Inspection I | Inspection II | Tools required | New parts required | Warm engine required | Dealer service recommended |
|--|-------------|--------------|---------------|----------------|--------------------|----------------------|----------------------------|
| <b>Oil Change service</b>  |             |              |               |                |                    |                      |                            |
| • Change oil and oil filter  | ✓           | ✓            | ✓             | ✓              | ✓                  | ✓                    |                            |
| <b>Tune up</b>   |             |              |               |                |                    |                      |                            |
| • Check and adjust valve clearance   |             | ✓            | ✓             | ✓              |                    |                      |                            |
| • Replace spark plugs  |             |              | ✓             | ✓              | ✓                  |                      |                            |
| • Replace air filter   |             |              | ✓             |                | ✓                  |                      |                            |
| • Replace main fuel filter   |             |              | ✓             | ✓              | ✓                  |                      |                            |
| • Inspect ignition distributor cap, rotor and spark plug wires; replace as necessary                           |             |              | ✓             |                |                    |                      |                            |
| • Check idle mixture and adjust  |             | ✓            | ✓             |                |                    | ✓                    | ✓                          |
| <b>Engine compartment maintenance</b>  |             |              |               |                |                    |                      |                            |
| • Check brake fluid level  |             | ✓            | ✓             |                |                    |                      |                            |
| • Check clutch fluid level   |             | ✓            | ✓             |                |                    |                      |                            |
| • Check automatic transmission fluid level and correct as necessary  |             |              | ✓             |                |                    |                      |                            |
| • Check battery acid level and correct as necessary  |             | ✓            | ✓             |                |                    |                      |                            |
| • Check engine coolant level and anti-freeze protection and add as necessary. Inspect for cooling system leaks |             | ✓            | ✓             |                |                    |                      |                            |
| • Lubricate accelerator linkage and throttle linkage with oil. Lubricate bearing of throttle plate with grease |             | ✓            | ✓             |                |                    |                      |                            |
| • Inspect V-belt tension and condition, and adjust or replace as necessary                                     |             |              | ✓             | ✓              |                    |                      |                            |

**Routine Maintenance - Service Indicator Intervals  
(Continued)**

| Maintenance Item   | Oil Service | Inspection I | Inspection II | Tools required | New parts required | Warm engine required | Dealer service recommended |
|--|-------------|--------------|---------------|----------------|--------------------|----------------------|----------------------------|
| <b>Under car Maintenance</b>   |             |              |               |                |                    |                      |                            |
| • Check manual transmission oil level and add as necessary   |             | ↙            | ↙             | ↙              |                    |                      |                            |
| • Replace manual transmission oil  |             |              | ↙             | ↙              |                    |                      |                            |
| • Replace automatic transmission fluid   |             | ↙            |               |                | ↙                  | ↙                    |                            |
| • Check final drive fluid level  |             | ↙            | ↙             |                |                    |                      |                            |
| • Replace final drive oil  |             |              | ↙             | ↙              |                    | ↙                    |                            |
| • Check fuel tank, fuel lines, and all connections for leaks   |             | ↙            | ↙             |                |                    |                      |                            |
| • Inspect exhaust system   |             | ↙            | ↙             |                |                    |                      |                            |
| • Check power steering system for leaks. Check fluid Level   |             | ↙            | ↙             |                |                    |                      |                            |
| • Check brake callipers and dust boots for leaks   |             | ↙            | ↙             |                |                    |                      |                            |
| • Inspect brake system for damaged hoses and lines, leaks or damage  |             | ↙            | ↙             |                |                    |                      |                            |
| • Check brake pad and shoe wear  |             | ↙            | ↙             |                |                    |                      |                            |
| • Inspect parking brake cable, adjust as necessary   |             | ↙            | ↙             |                |                    |                      |                            |
| • Inspect front suspension and steering for play   |             | ↙            | ↙             |                |                    |                      |                            |
| • Inspect rear drive axle joint boots  |             | ↙            | ↙             |                |                    |                      |                            |
| • Check front wheel bearing play   |             |              | ↙             |                |                    |                      |                            |
| • Inspect wheels and tires, check tire pressure and condition  |             | ↙            | ↙             |                |                    |                      |                            |
| • Inspect clutch for wear  |             |              | ↙             | ↙              |                    |                      |                            |
| <b>Body and interior maintenance</b>   |             |              |               |                |                    |                      |                            |
| • Lubricate door hinges  |             | ↙            | ↙             |                |                    |                      |                            |
| • Check headlight and driving light aiming and adjust as necessary   |             | ↙            | ↙             |                |                    |                      | ↙                          |
| • Check operation of headlights, parking lights, back-up lights, license plate lights, interior lights, glove box light, engine compartment light, trunk light, instrument panel lights, turn signals, emergency flashers, stop lights, horns, headlight flasher and dimmer switch |             | ↙            | ↙             |                |                    |                      |                            |
| • Check active check control panel   |             | ↙            | ↙             |                |                    |                      |                            |
| • Sliding sunroof, clean and lubricate slide rail  |             |              | ↙             |                |                    |                      |                            |
| • Check function of air conditioning and refrigerant charge  |             | ↙            | ↙             |                |                    |                      | ↙                          |
| • Check function of seat belts   |             | ↙            | ↙             |                |                    |                      |                            |
| • Check windshield washer fluid level and add as necessary, Check operation of washer system, Check condition of wiper blades  |             | ↙            | ↙             |                |                    |                      |                            |
| <b>Road Test</b>   |             |              |               |                |                    |                      |                            |
| • Check braking performance, steering heating and ventilation, automatic transmission, and mirrors   |             | ↙            | ↙             |                |                    |                      |                            |